



1854776

X-Buckingham Wine Cabinet-PL

Parts List

A.	Top Assembly	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Back Panel	1 pc
E.	Left Door	1 pc
F.	Right Door	1 pc
G.	Sliding Shelf	1 pc
H.	Front Wave Rails	4 pcs
I.	Back Wave Rails	4 pcs
J.	Front Top Rail	1 pc
K.	Bottom Assembly	1 pc
L.	Handles	4 pcs
M.	Connecting Bolts	2 pcs
N.	Eccentric Cams	2 pcs
O.	Plastic Covers	2 pcs
P.	Phillips Head Bolts	2 pcs
Q.	Allen Head Bolts	4 pcs
R.	Lock Washers	4 pcs
S.	Flat Washers	4 pcs
T.	Confirmat Screws	4 pcs
U.	Pan Phillips Head Screws	18 pcs
V.	Flat Phillips Head Screws	8 pcs
W.	Wood Dowels	2 pcs
X.	Phillips Head Screwdriver	1 pc
Y.	Flat Head Screwdriver	1 pc
Z.	Allen Head Wrench	1 pc
ZA.	Optional Allen Head Screwdriver Bit	1 pc



1854776


X-Buckingham Wine Cabinet-PL

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


Hardware Illustrations




M. Connecting Bolt

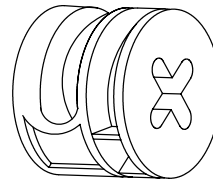


N. Eccentric Cam

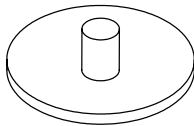


O. Plastic Cover




P. Phillips Head Bolt

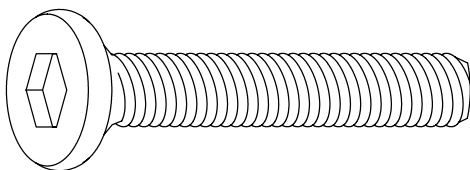

Q. Allen Head Bolt



R. Lock Washer

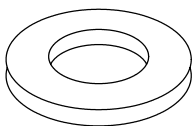

S. Flat Washer



1854776

X-Buckingham Wine Cabinet-PL

Attach Left & Right Side Panels, Top & Bottom Assemblies

Parts required

A.	Top Assembly	1 pc	O.	Plastic Covers	2 pcs
B.	Left Side Panel	1 pc	Q.	Allen Head Bolts	4 pcs
C.	Right Side Panel	1 pc	R.	Lock Washers	4 pcs
H.	Front Wave Rails	4 pcs	S.	Flat Washers	4 pcs
I.	Back Wave Rails	4 pcs	T.	Confirmat Screws	4 pcs
J.	Front Top Rail	1 pc	Y.	Flat Head Screwdriver	1 pc
K.	Bottom Assembly	1 pc	Z.	Allen Head Wrench	1 pc
M.	Connecting Bolts	2 pcs	ZA.	Optional Allen Head Screwdriver Bit	1 pc
N.	Eccentric Cams	2 pcs			

1. **Attach Connecting Bolts (M)** Put Left & Right Side Panels (B, C) on a soft surface. Insert Connecting Bolts (M) into the pre-threaded holes in the Left & Right Side Panels (B, C). Tighten in a clockwise direction using Flat Head Screwdriver (Y). See Illustration #1.
2. **Attach Left Side Panel (B)** Insert the dowels of Front & Back Wave Rails (H, I) into the pre-drilled holes in the front & back of Left Side Panel (B). **Be sure the wave shape faces the top of Left Side Panel (B).** Align the Connecting Bolts (M) with the pre-drilled holes in the end of Front Top Rail (J). **Be sure the magnet on the Front Top Rail (J) faces top the wave shape of Front Wave Rails (H).** Insert the Eccentric Cams (N) into the pre-drilled holes in the Front Top Rail (J). Make sure the groove in the Eccentric Cams (N) faces out and the arrow points towards the Connecting Bolts (M). Use the Flat Head Screwdriver (Y) to adjust the Eccentric Cams (N) and lock the Connecting Bolts (M) in place by turning in a clockwise direction. Cover the Eccentric Cams (N) with Plastic Covers (O). See Illustration #1.
3. **Repeat above step to attach Right Side Panel (C).** See Illustration #1.
4. **Attach Top Assembly (A)** Put the Top Assembly (A) upside down on a soft surface. Insert the dowels in the top of Left & Right Side Panels (B, C) into the pre-drilled holes in the Top Assembly (A) so that the pre-drilled holes in the cleat rails of Left & Right Side Panels (B, C) align with the pre-threaded holes in the Top Assembly (A). Secure with Allen Head Bolts (Q), Lock Washers (R) and Flat Washers (S) using Allen Head Tool (Z or ZA). See Illustration #1.
5. **Attach Bottom Assembly (K)** Insert the dowels in the bottom of Left & Right Side Panels (B, C) into the pre-drilled holes in the Bottom Assembly (K) so that the pre-threaded holes in the Left & Right Side Panels (B, C) align with the pre-drilled holes in the Bottom Assembly (K). Secure with Confirmat Screws (T) using Allen Head Tool (Z or ZA). Put the item upright. See Illustration #1.

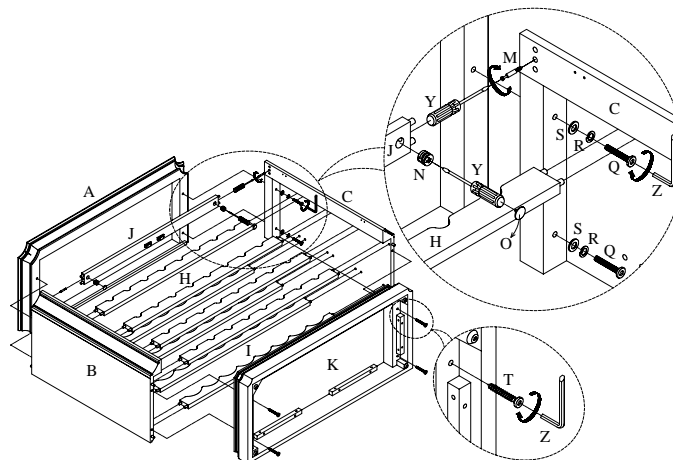


Illustration # 1



1854776

X-Buckingham Wine Cabinet-PL

Attach Door, Back Panel and Sliding Shelf

Parts required

B.	Left Side Panel	1 pc	L.	Handles	4 pcs
C.	Right Side Panel	1 pc	P.	Phillips Head Bolts	2 pcs
D.	Back Panel	1 pc	U.	Pan Phillips Head Screws	18 pcs
E.	Left Door	1 pc	V.	Flat Phillips Head Screws	8 pcs
F.	Right Door	1 pc	W.	Wood Dowels	2 pcs
G.	Sliding Shelf	1 pc	X.	Phillips Head Screwdriver	1 pc

6. **Attach Back Panel (D)** Put the Back Panel (D) into the frame profile formed by other item parts. Secure with Pan Phillips Head Screws (U) using Phillips Head Screwdriver (X). See Illustration #2.
7. **Attach Doors** Align the pre-drilled holes in the hinges of Left & Right Doors (E,F) with the pre-drilled holes in the Left & Right Side Panels (B, C). Be sure the metal plates on the doors are at the top. Secure with Flat Phillips Head Screws (V) using Phillips Head Screwdriver (X). Align the pre-threaded holes of Handles (L) with the pre-drilled holes in the doors. Secure with Phillips Head Bolts (P) using Phillips Head Screwdriver (X). See Illustration #2.
8. **Attach Sliding Shelf (G)** Align the exposed threads on the Sliding Shelf (G) with the threads on the Handles (L). Tighten by turning in a clockwise direction. Insert the Sliding Shelf (G) into the gap between the Top Assembly (A) and Front Top Rail (J). Insert the Wood Dowels (W) from inside the cabinet into the pre-drilled holes in the Sliding Shelf (G). See Illustration #2.

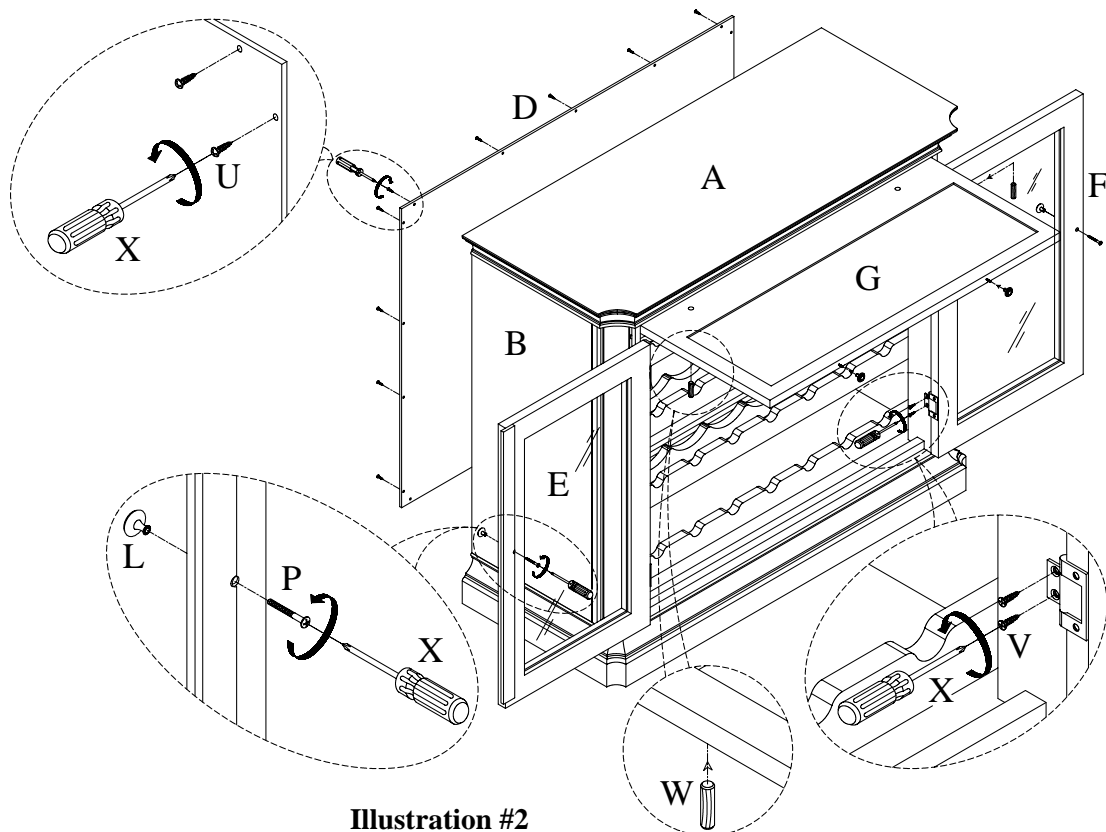


Illustration #2